


ODRescue™ Installation Instructions


Included with your ODRescue™ Box is a mounting bracket, four (4) anchors, and four (4) screws for wall installation. Two (2) additional screws are provided for optional use to secure the box to the bracket. A mounting template is provided for easy placement of anchors and screws.




Scan the QR code to watch a video with detailed installation instructions.

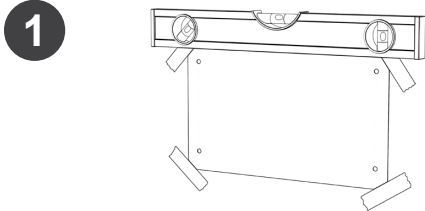


1 Place mounting template on the wall in the desired location, ensuring it is level. Secure the template to the wall with tape.

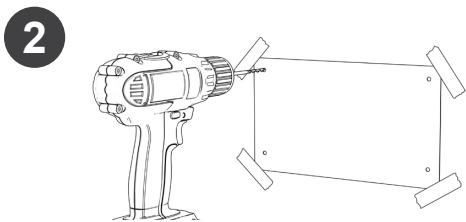


2 Drill pilot holes with a 7/32" (5.5mm) drill bit. For holes located over a wall stud, skip this step and move directly to Step 4.

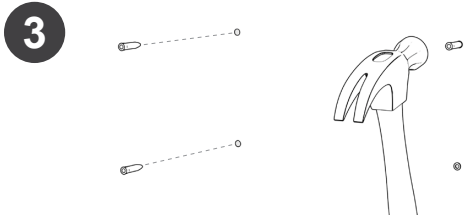

3 If inserting anchors into drywall, concrete, or brick, use a hammer to gently tap the anchor until it is flush with the wall. Otherwise, skip to Step 4.

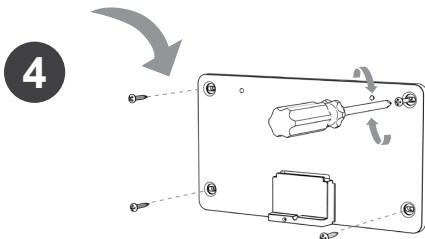


4 Align mounting bracket with holes or anchors. Using a screwdriver, insert the provided screws into each hole or anchor through the mounting bracket and secure it to the wall. (NOTE: Using the provided screws is essential for magnets located in the ODRescue™ Box to properly secure the box to the wall.)

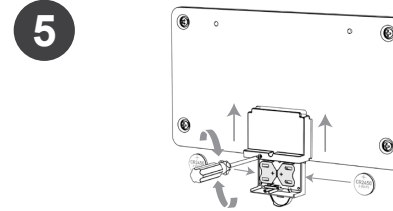


FOR ODRESCUE™ ALARM & ALERT PRODUCTS ONLY


Insert two CR2450 batteries into alarm tray. Align alarm tray with bottom of mounting bracket, push up, and secure with screw.

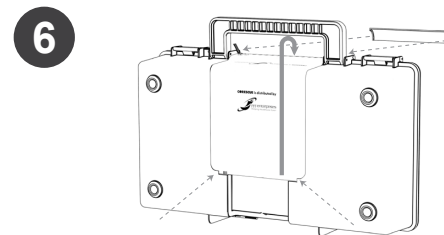

6 Attach the ODRescue™ Alert label starting from the back of the box. Wrap it around to the front, making sure to follow the indentations on the box to keep the label straight. Once the label is in place, secure it by pressing firmly on the lid. Apply the label cover to the front.

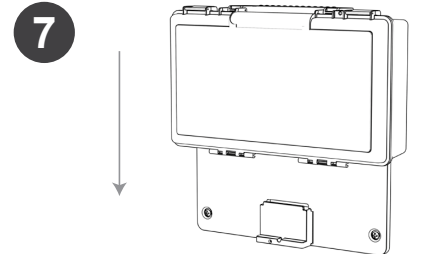

7 Affix your ODRescue™ Box to the mounting bracket by vertically positioning the ODRescue™ Box just above mounting bracket and sliding downwards. The ODRescue™ Box will rest on the center cleat of the mounting bracket with its four magnetic feet positioned directly on top of the 4 wall screws

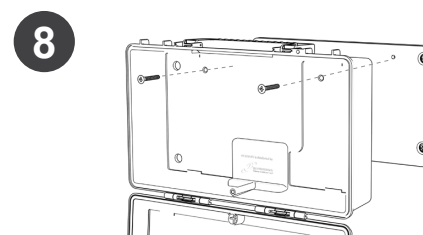


OPTIONAL

To permanently attach the box, remove it from the wall and take off the rear artwork panel. Drill through the indentations on the inside back with a 5/32" (4.0mm) bit. Reattach the back of the box onto the mounting bracket and insert screws into the holes or anchors.

ODRescue™ Mounting Template

For assistance, please contact:
Support@ODRescue.com

+DRESCUE™

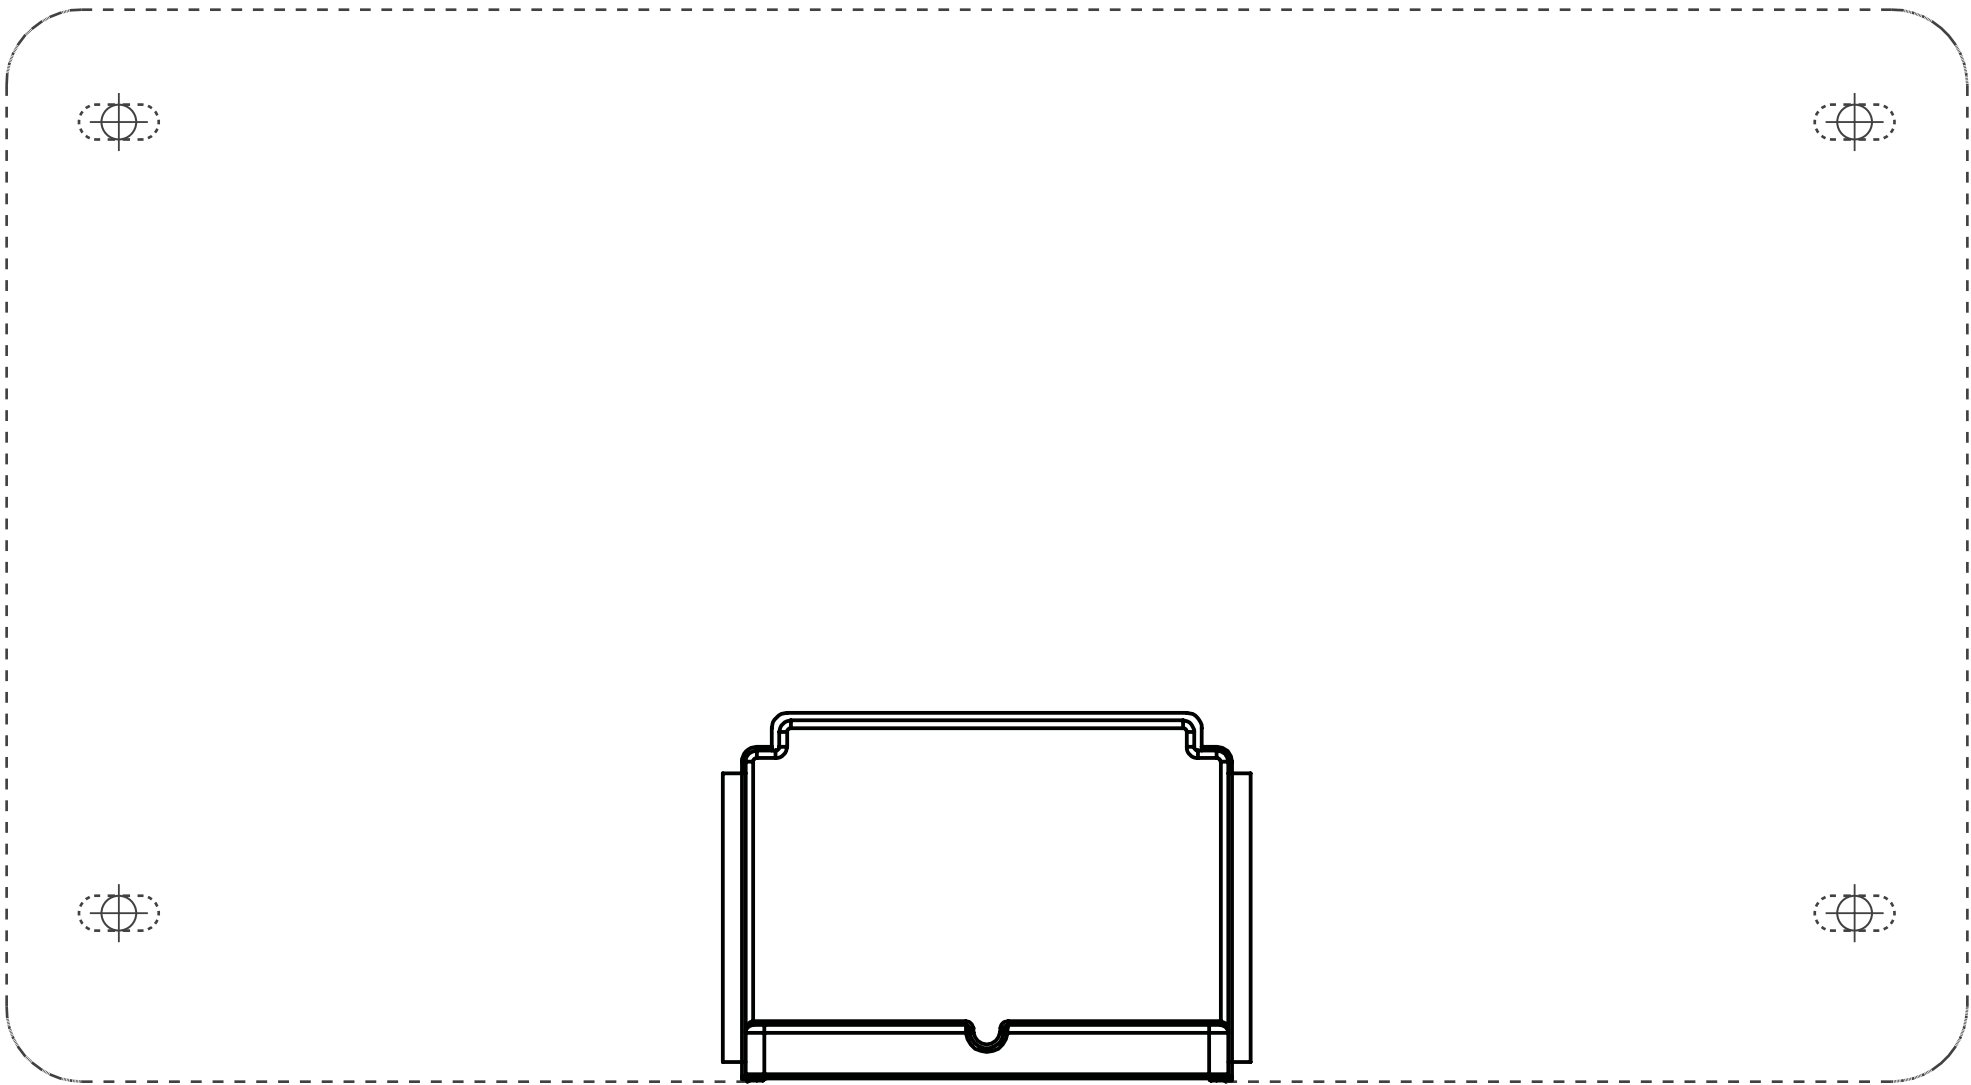

ODRescue Box™ is manufactured by FFF Enterprises.

©2025 FFF Enterprises, Inc. All Rights Reserved. Property of FFF Enterprises, Inc. FL1394 030525